



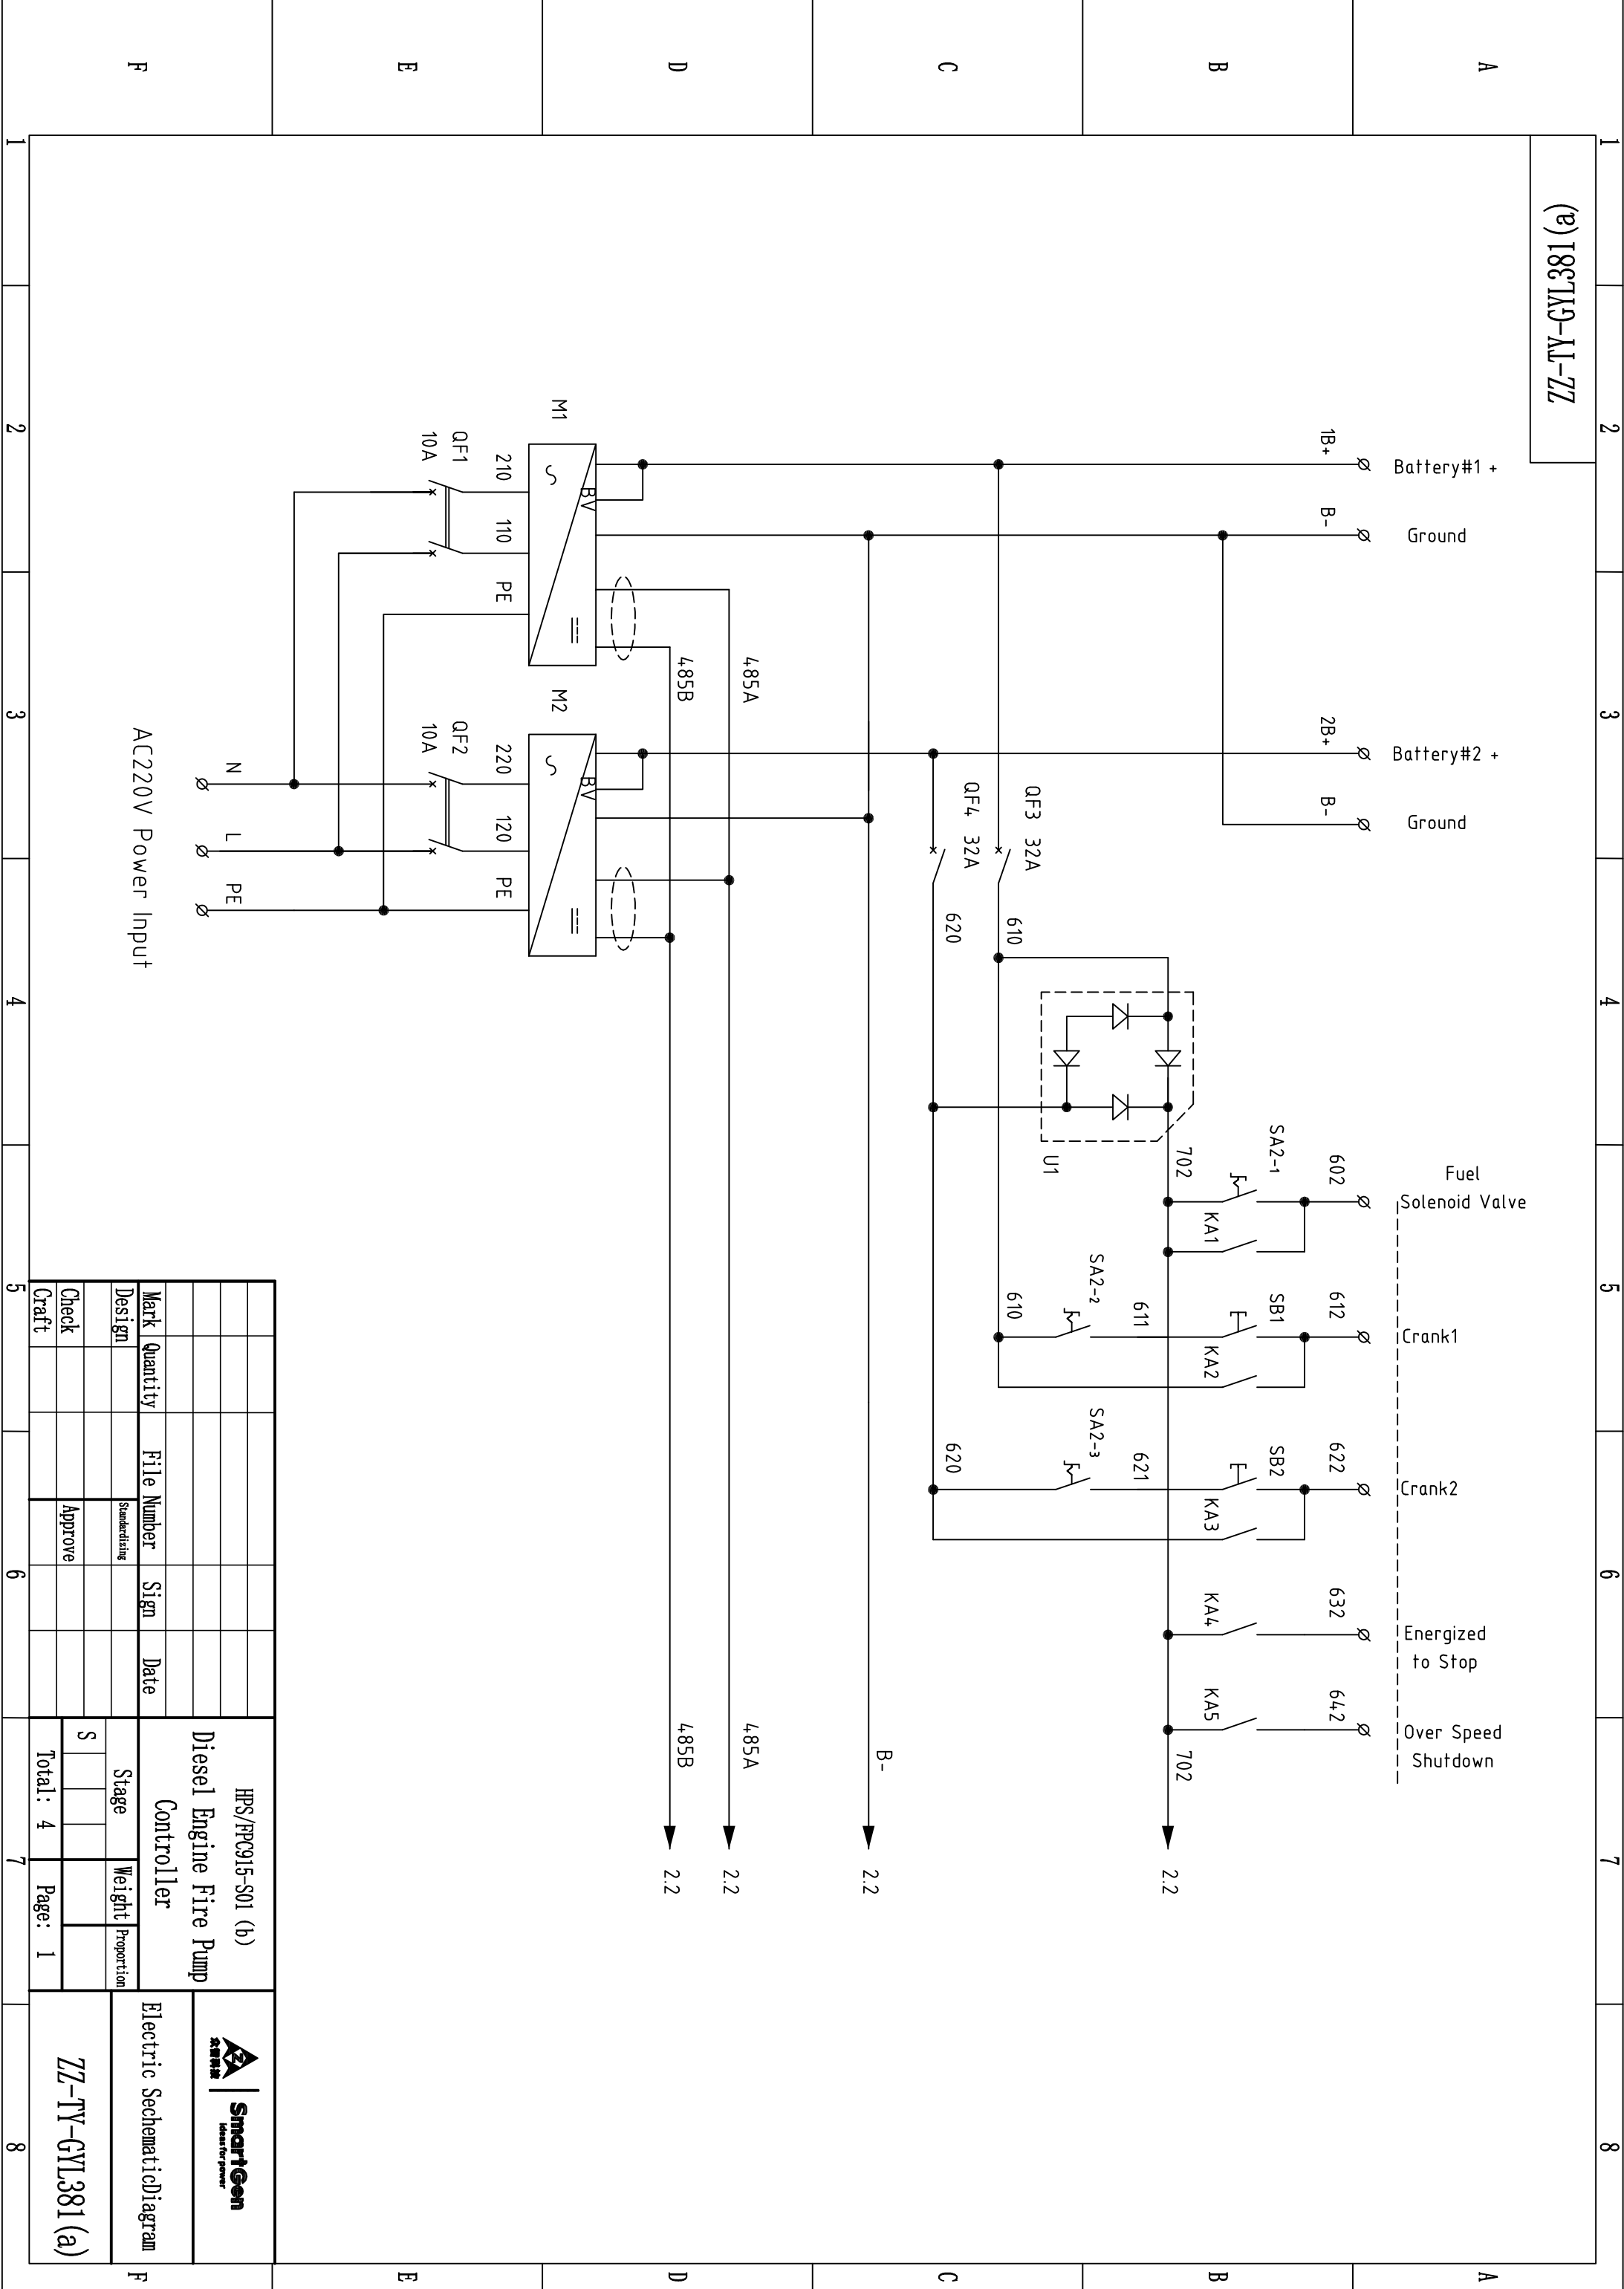

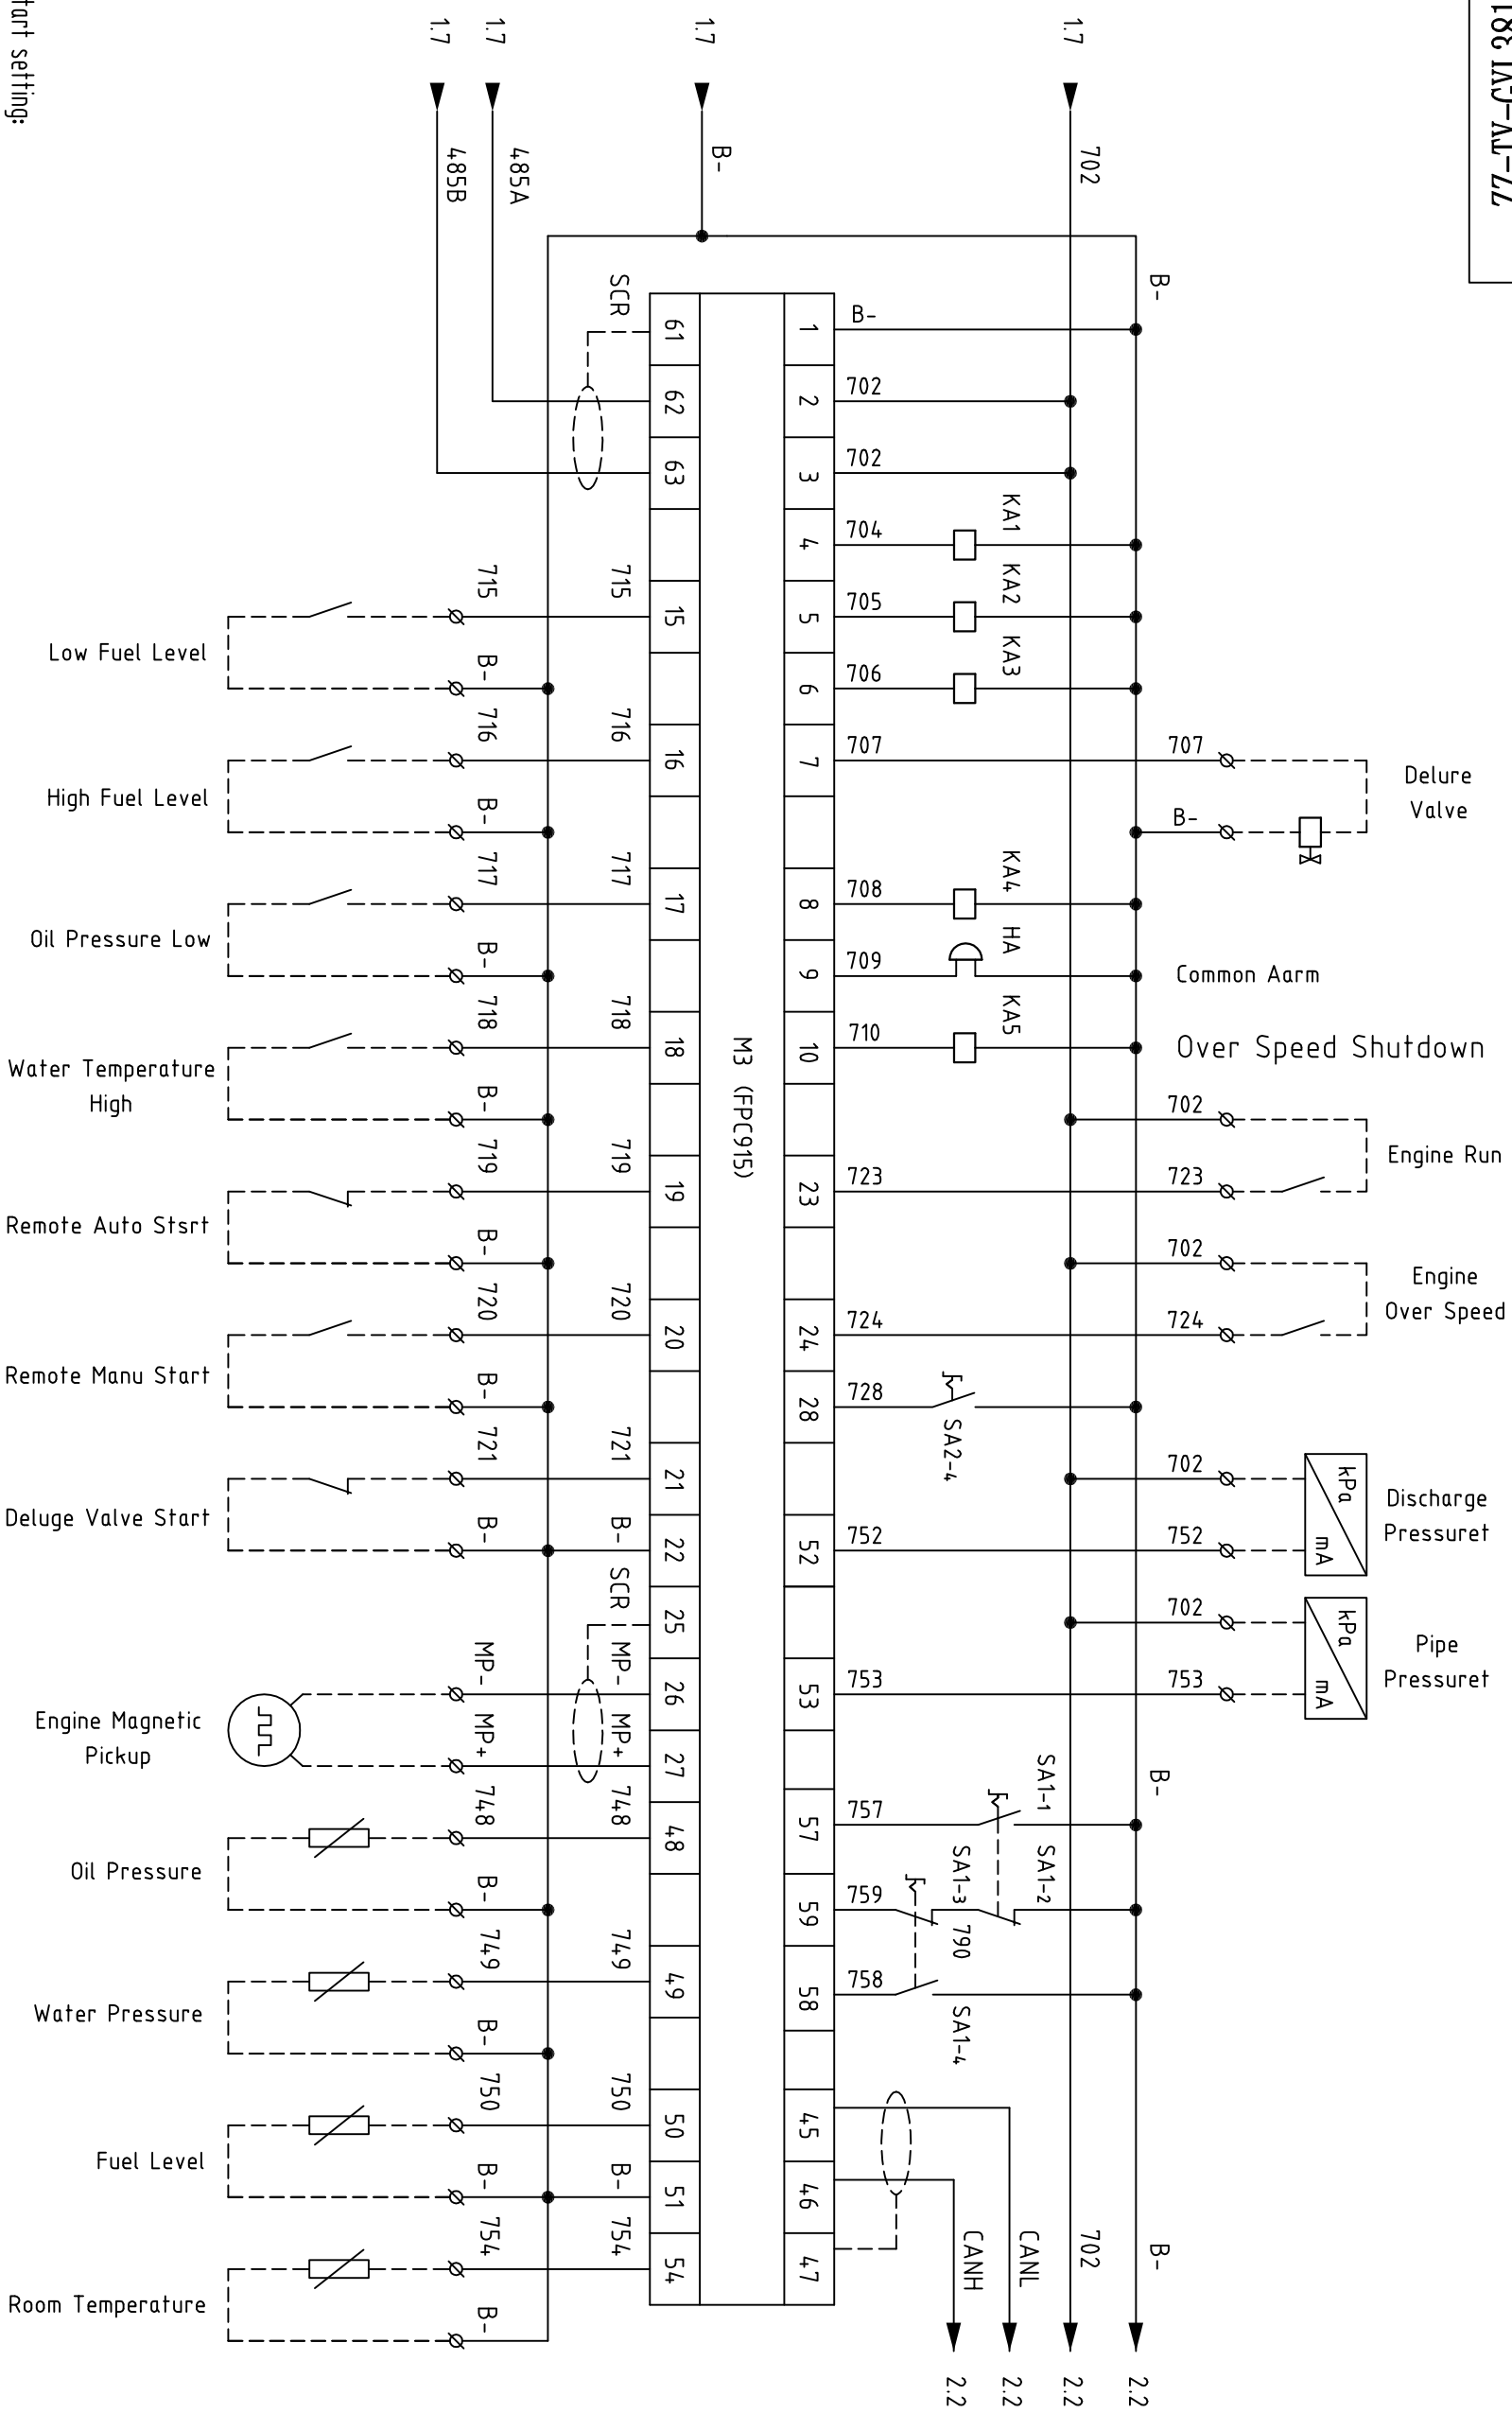

Automatic start setting:

- a) When pipe pressure is lower than set value , start automatically, When pipe pressure arrives set value, stop automatically;
- b) When Remote Auto Start (always close) open, start automatically (only transfer to OFF mode can stop);
- c) When Deluge Valve Start (always close) open, start automatically (only transfer to OFF mode can stop);
- d) When Remote Manual Start (always open) close, start automatically (only transfer to OFF mode can stop);
- e) Scheduled start: Over time start, stop after the operation for the set time;

f) Test start: start after pressed the Test button, stop after the operation for the set time, or Press the STOP button, or stop in OFF mode

Note: After Auto start, a, b, c, d only can overspeed alarm stop, the others only can overspeed alarm but not stop;

e, f other alarm stop can occur when in operation which make pipe pressure lower to start by connecting to test magnetic valve.

				HPS/FP09I5-S01 (b)	 SmartGen Ideas for power
				Diesel Engine Fire Pump Controller	
Mark	Quantity	File Number	Sign	Date	Electric Schematic Diagram
Design		Standarding			
Check		Approve			
Craft					
Total:	4	Page:	2		
					ZL-TY-GYL381(a)

